





Pro-Read / ARB Meter

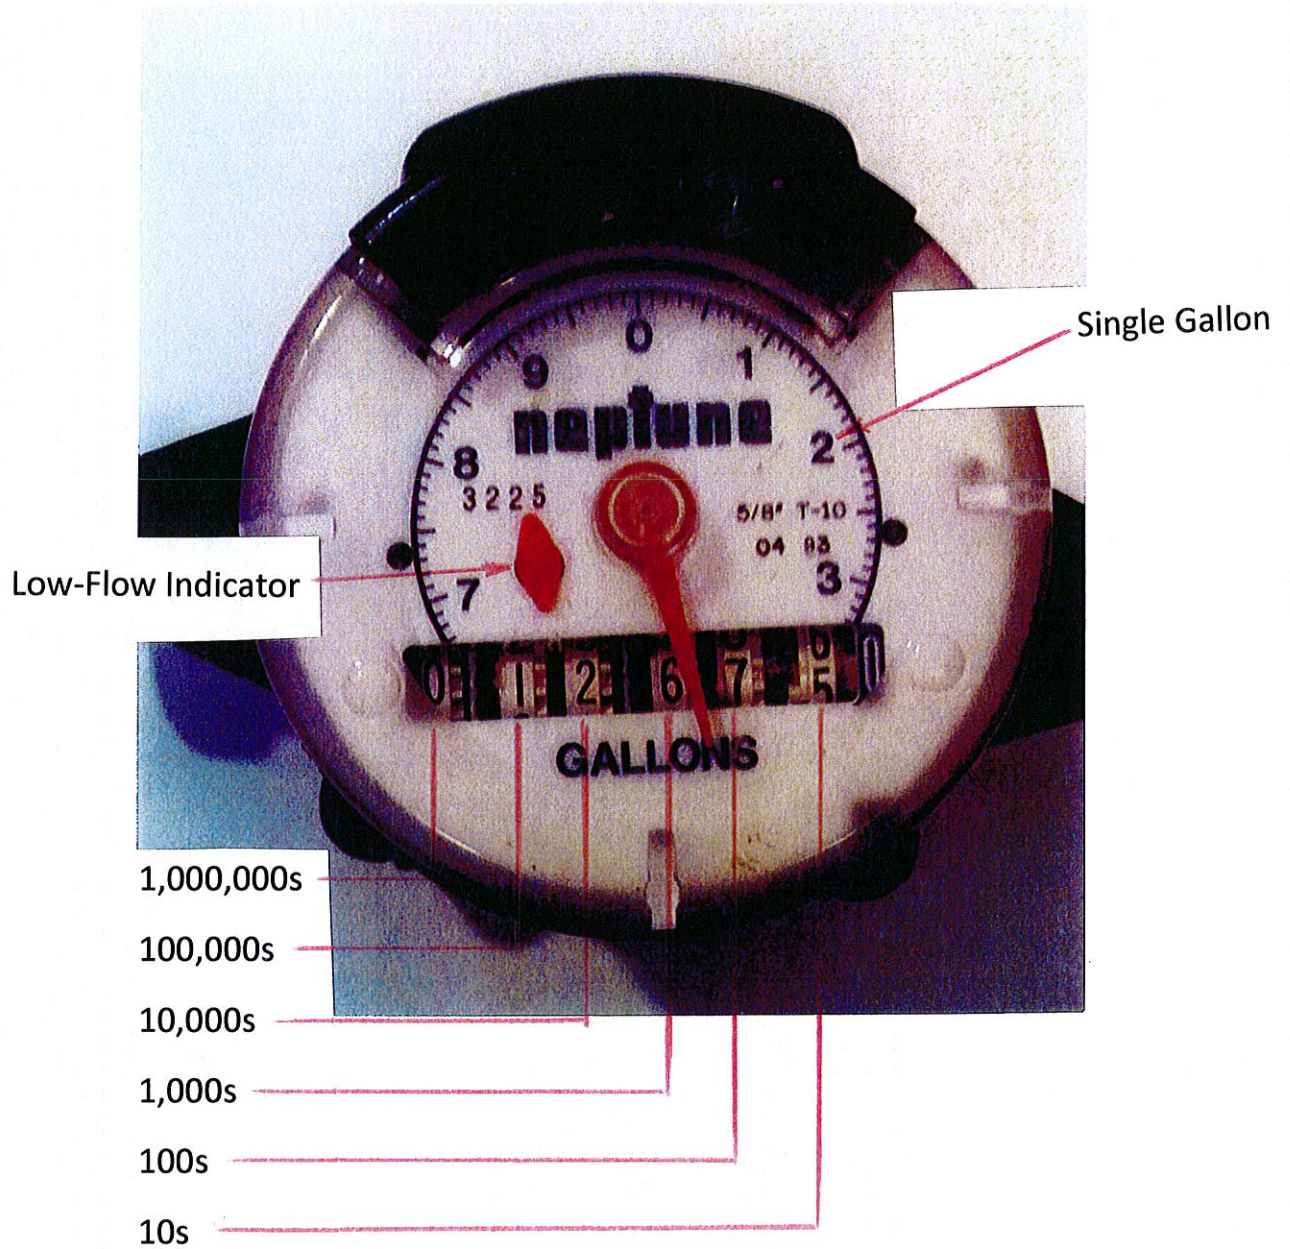

E-Coder Register Face

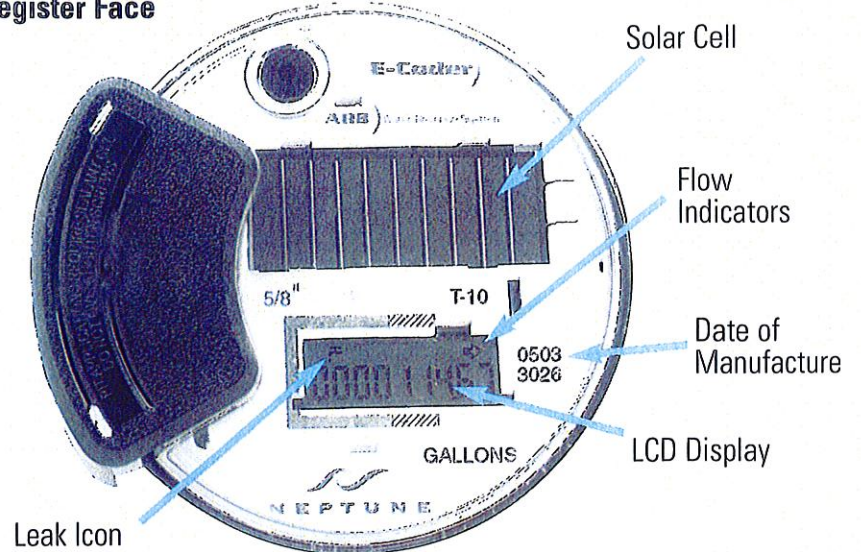

E-Coder Icons and Displays

 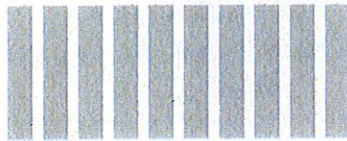

RATE

Solar Cell, located at the top of the E-Coder, supplies the power for the LCD panel (light activated).


Flow indicators show the direction of flow through the meter:

- ON** Water in use.
- OFF** Water not in use.
- Flashing** Water is running slowly.
- (-)** Reverse flow.
- (+)** Forward flow.

Leak indicator displays a possible leak:

- OFF** No leak indicated.
- Flashing** Intermittent leak indicates that water has been used for at least 50 of the 96 15-minute intervals during a 24-hour period.
- Continuous** Continuous leak indicates water use for all 96 15-minute intervals during a 24-hour period.

Rate of Flow Average flow rate is displayed every 6 seconds on LCD display.

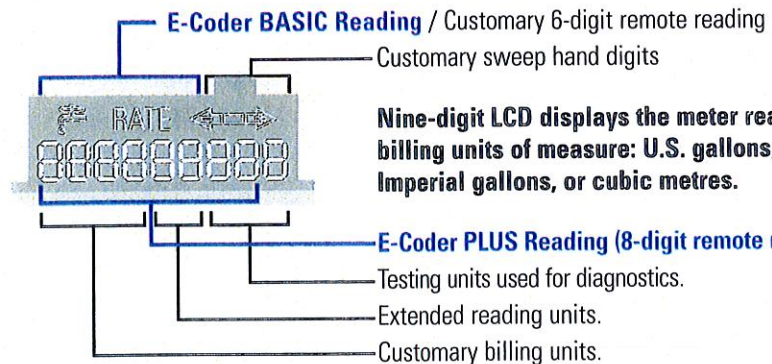

Nine-digit LCD displays the meter reading in billing units of measure: U.S. gallons, cubic feet, Imperial gallons, or cubic metres.